

KLA5200 PARTS LIST

No.	Manufacturer	Part No.	Description	Quantity	Condition	Remark
1	KLA-Tencor	073-404484-00	710-404485-00, Linear Arm Adaptor B/D	9	Used	
2	KLA-Tencor	073-400245-00	710-400246-00, Theta B/D	5	Used	
3	KLA-Tencor	073-400247-00	710-400248-00, Bridge B/D	5	Used	
4	KLA-Tencor	073-451126-00	710-451127-00, AirFlow Sensor B/D	4	Used	
5	KLA-Tencor	073-450273-00	710-450274-00	1	Used	
6	KLA-Tencor	073-400554-00	710-400161-00, Wafer Sensor Emitter B/D	2	Used	
7	KLA-Tencor	073-450886-00	710-450885-00, PAT Light Controller B/D	3	Used	
8	KLA-Tencor	073-404227-00	710-404228-00, Limit Breakout B/D	5	Used	
9	KLA-Tencor	073-404207-00	710-404208-00, Wafer Transfer B/D	4	Used	
10	KLA-Tencor	073-404143-00	710-400180-00, PZT FED B/D	2	Used	
11	KLA-Tencor	073-400570-00	710-400180-00, PZT FED B/D	3	Used	
12	KLA-Tencor	073-404581-00	710-404582-00, PZT Controller B/D	1	Used	
13	KLA-Tencor	073-404369-00	710-404368-00, ALIB1 B/D	2	Used	
14	KLA-Tencor	073-400536-00	710-400535-00, Linear Arrav B/D	5	Used	
15	KLA-Tencor	073-450319-00	710-450320-00, PID Controller B/D	5	Used	
16	KLA-Tencor	073-401537-00	710-401536-00, Encoder Interface B/D	3	Used	
17	KLA-Tencor	073-404555-00	710-404556-00, Driver B/D	7	Used	
18	KLA-Tencor	073-404423-00	710-404420-00, I/O B/D	1	Used	
19	KLA-Tencor	0011690-000	0011691-000, NT Interface B/D	1	Used	
20	KLA-Tencor		710-450048-00, MVME 167-32B,	1	Used	
21	KLA-Tencor		750-400159-00, VIP-1024A	3	Used	
22	KLA-Tencor		712-404561-00, MM-6326	3	Used	
23	KLA-Tencor	073-404145	710-404146-00, EXTENSION B/D	4	Used	